



## INSTALLATION MANUAL

### CABLE MANAGER

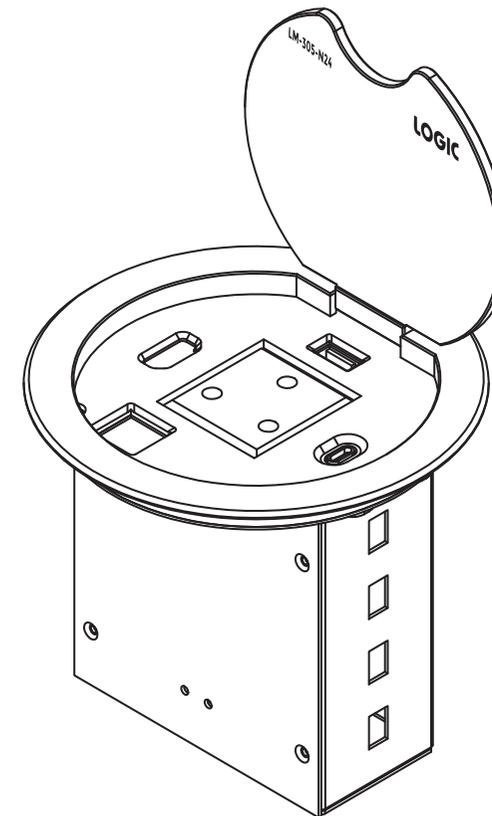


### Cable Manager Locking Details

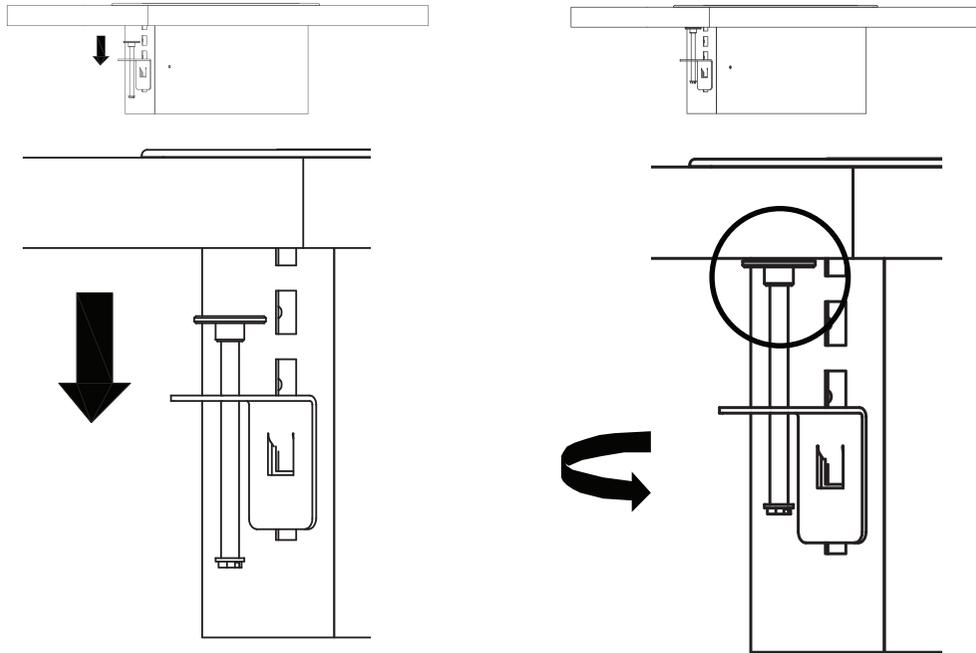

4. After positioning the cable manager into the table cut-out, insert the mounting clamp into the enclosure for securing the unit to the table surface (on both sides) (Refer mounting clamp C in the checklist)

5. Softly tighten the screw to secure the enclosure towards the bottom side of the table (on both sides)


### Final view after installing the cable manager on the table

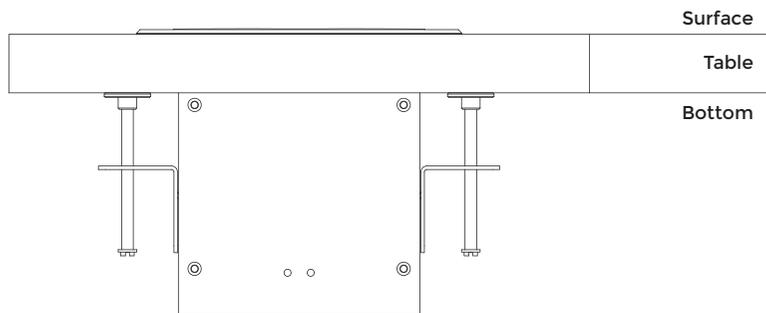


Ensure the mounting clamps has been assembled as per the above instruction (on both sides)

MODEL	SERIES
LM-305-N24	MANUAL SERIES


## Checklist

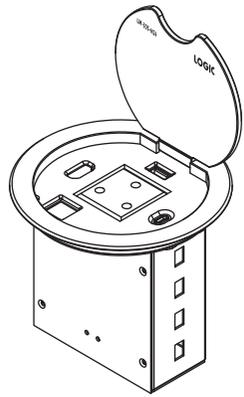

A: Cable Manager x 1

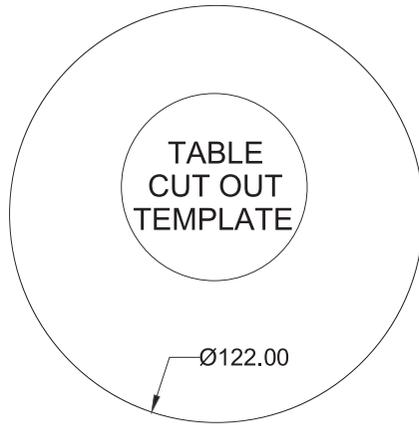


B: Cut-out template x 1

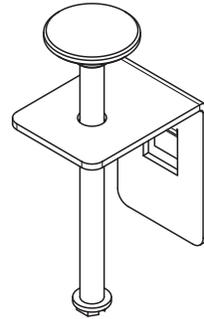


C: Mounting clamp x 2

**IMPORTANT :** Prior to installation, ensure that you have received all the parts as per the checklist


## 1. Product Dimension

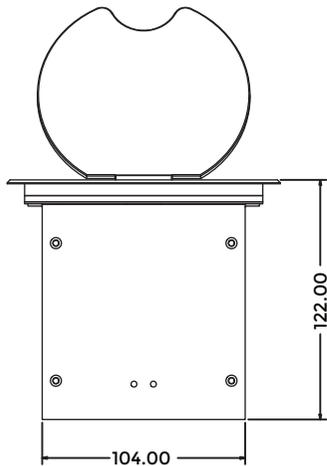

Front View

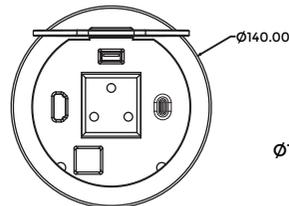

Top View

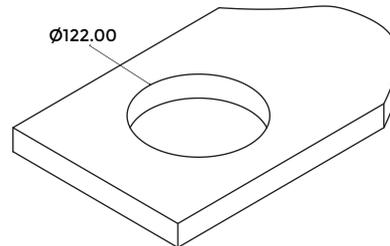

Dimension in mm


[www.logicav.in](http://www.logicav.in)

## 2. Installation


### Instructions to provision the cut-out on the table:

**ATTENTION:** The cut-out on the table for the cable cubby should be executed only by an experienced craftsman to prevent any damage/ scarring.


**CAUTION :** Wear safety glasses while operating power equipment. Failure to comply may result in eye injury.

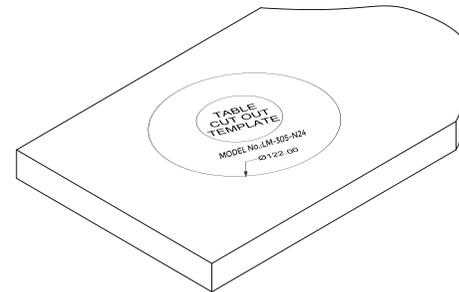


1. Place the cut-out template on the table

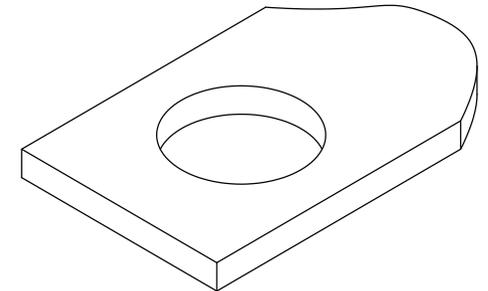

2. Follow template dimensions, to carry out the cut-out on the table

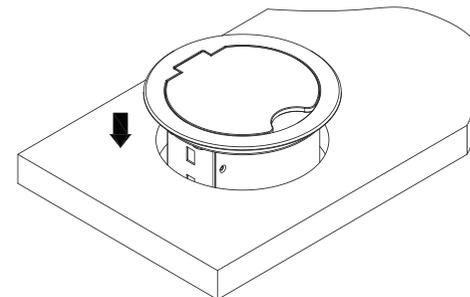

3. Then position the cable manager into the table cut-out

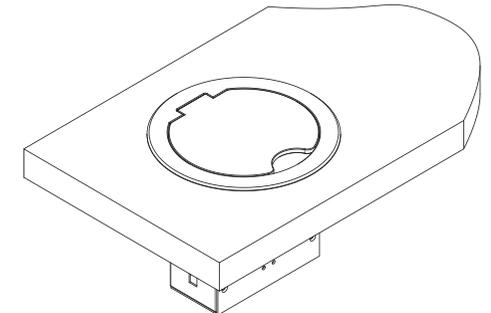

View after positioning the cable manager into the table

[www.logicav.in](http://www.logicav.in)