



## INSTALLATION MANUAL

### CEILING MOUNT

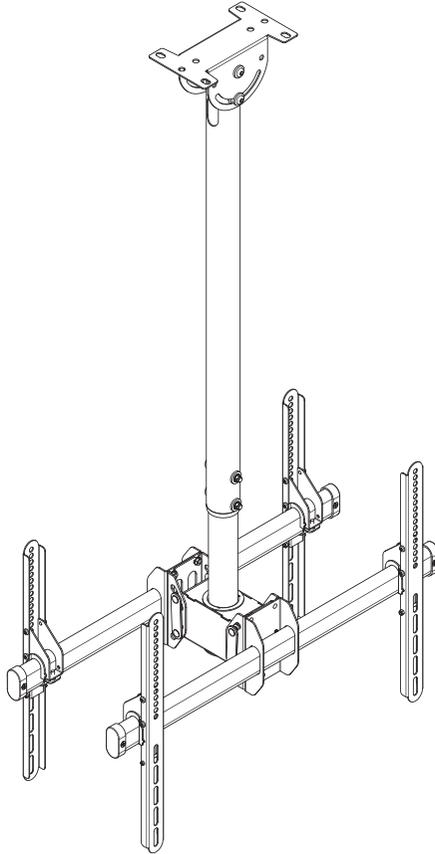


MODEL	SERIES	VESA	DISPLAY SIZE	MAX LOAD
LG-CMBB-65	Ceiling Mount	200x200 to 600x400	42" to 65"	220 lbs (100 kg)


# Checklist

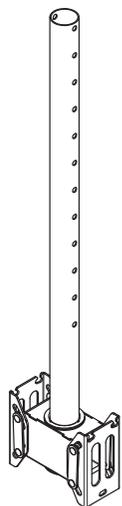


Connecting rod x 1

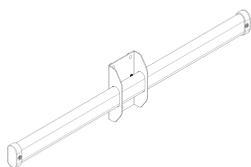

Horizontal bracket x 2

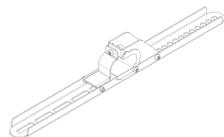

Interface bracket x 4

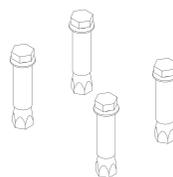

W-A: Anchor bolt x 4



M-A: M8 X 65 x 2



M-A: M8 x 2




M-A: Metal washer x 4



M-A: Plastic washer x 4




M-B: M8 X 25 x 8

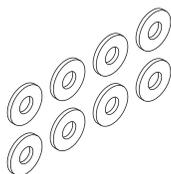


M-B: Metal and plastic washer x 8



M-C: M6 X 20 X 8

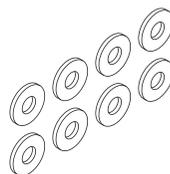


M-C: Metal and plastic washer x 8

 

M-D: Allen key x 1

**IMPORTANT :** Ensure that you have received all parts according to the checklist prior to installation.

# 1. Product Dimension

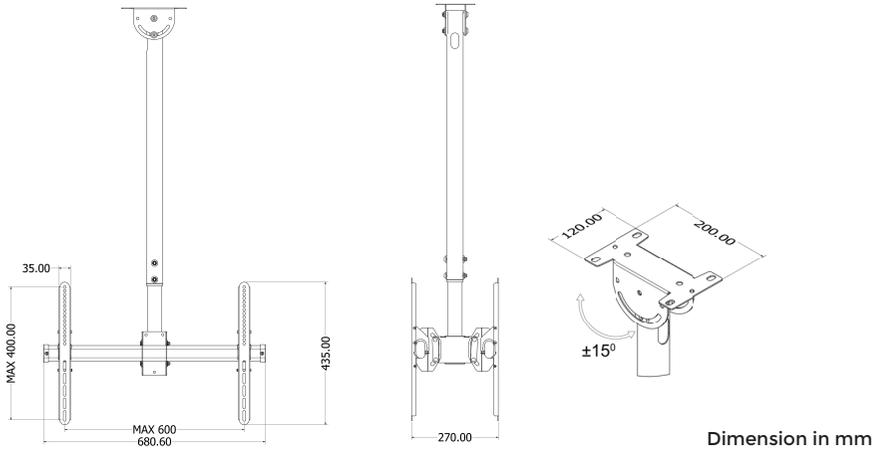


## 2. Installation


**Choose below method for fixing projector mount.**

**ATTENTION:** Drilling the ceiling for the projector mount should be executed by a craftsman only. Exercise care to prevent any scar or damage to the wall.


**CAUTION :** Wear safety glasses while operating power equipment. Failure to comply may result in eye injury.

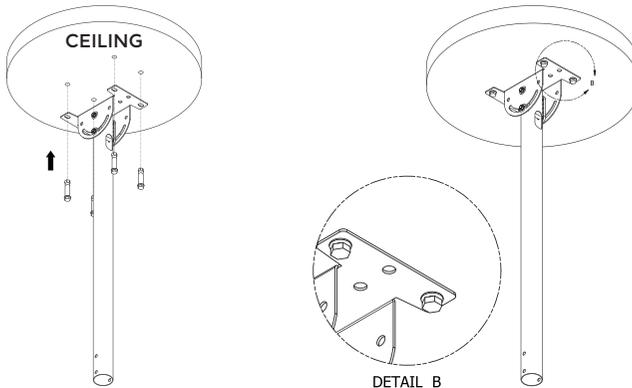

1. Place the ceiling mount on the ceiling mark on it and then drill, place the ceiling mount and insert the anchor bolt (Refer W-A in the checklist-kit)

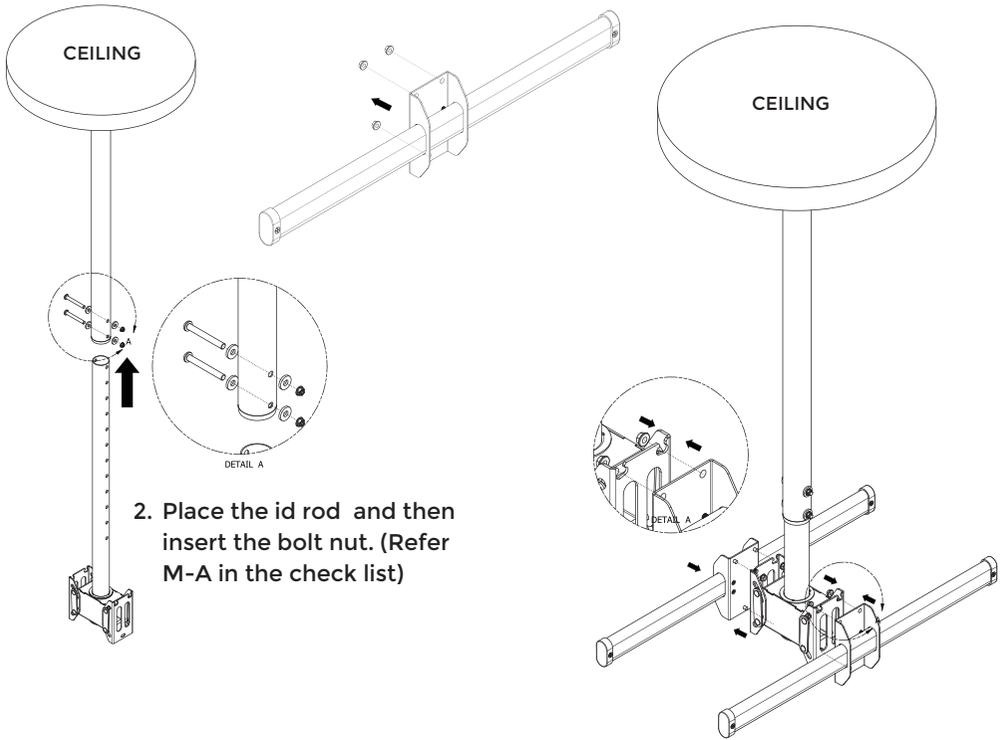


**3. Remove the nut from the horizontal bracket and place on the ceiling mount then insert the nut.**


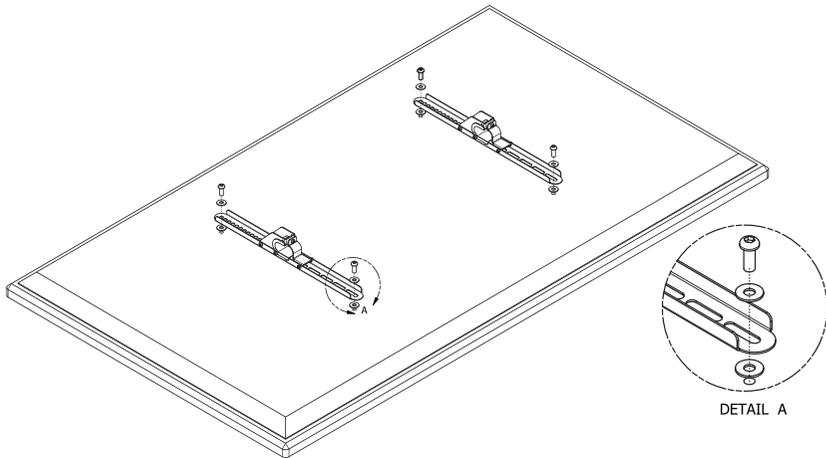


CEILING

6. Remove the clamp screw and place the TV/display on the ceiling mount

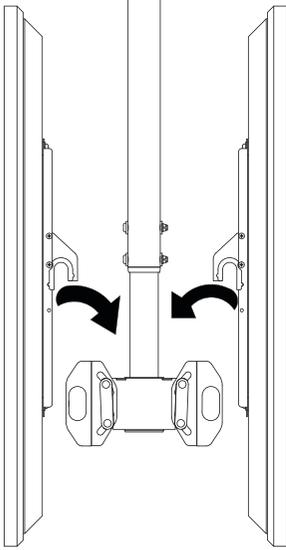



CEILING

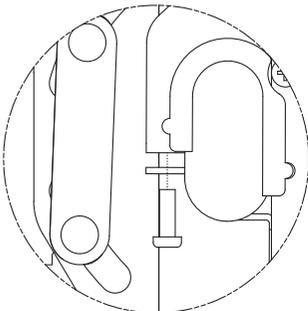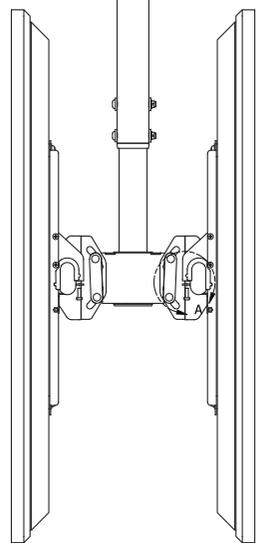

DETAIL A


7. After placing the display insert screw to the clamp

# Angle adjustment details

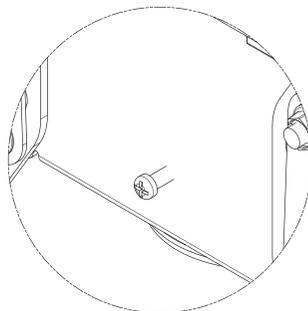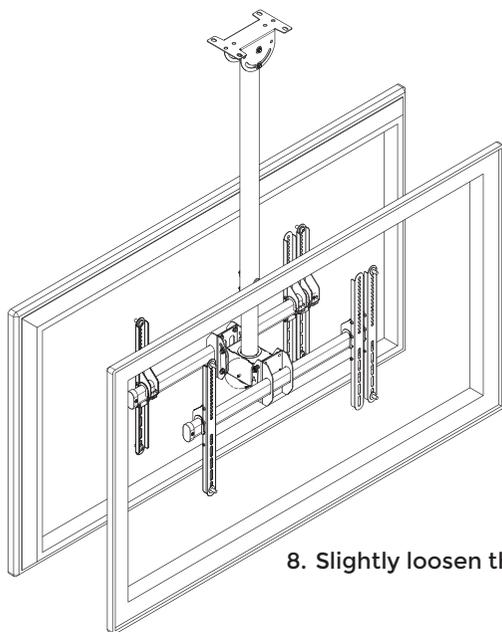



DETAIL A

8. Slightly loosen the screw to adjust the angle


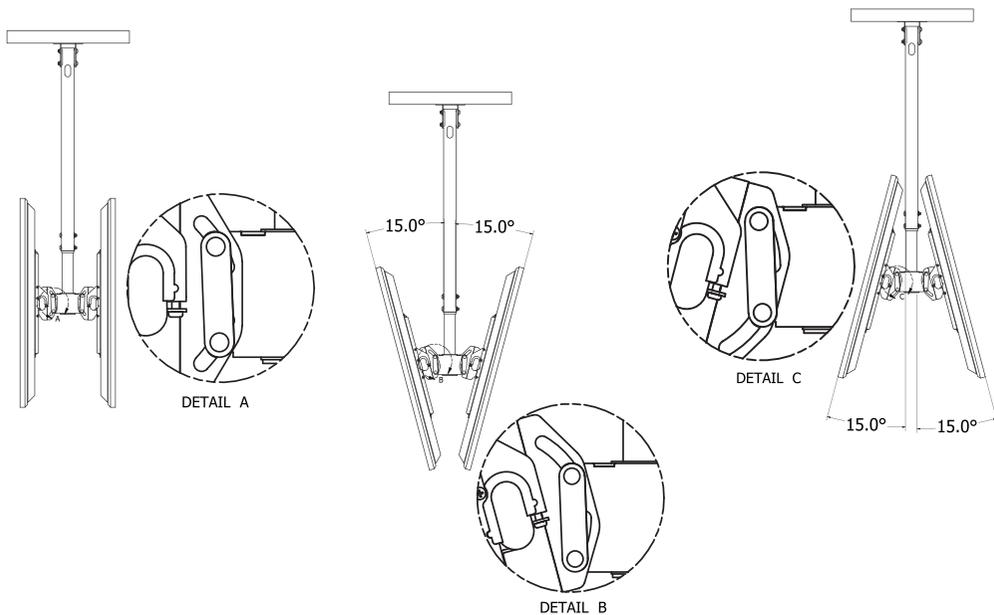


9. Slightly loosen the screw to adjust the angle



# Angle adjustment details

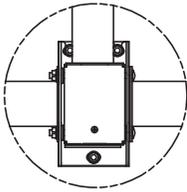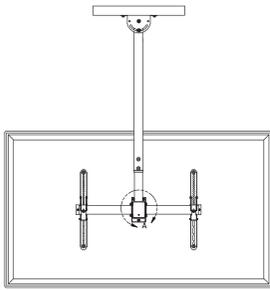



DETAIL A

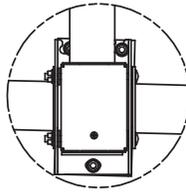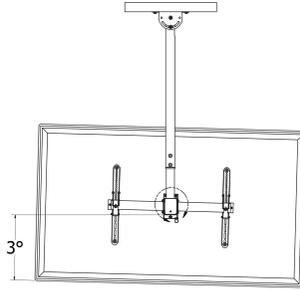



DETAIL B

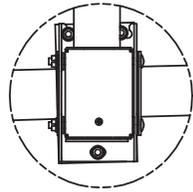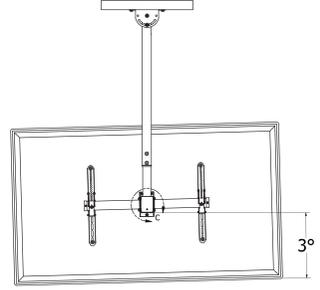



DETAIL C

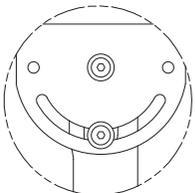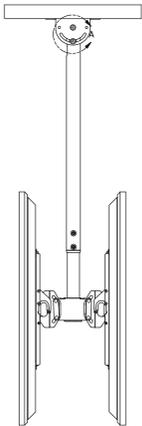

DETAIL A

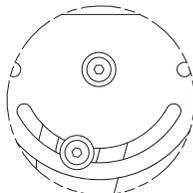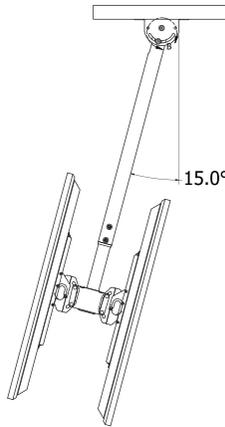


DETAIL B

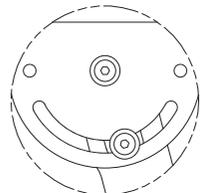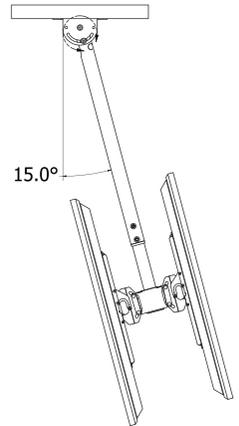

DETAIL C

10. Slightly loosen the screw to adjust the angle

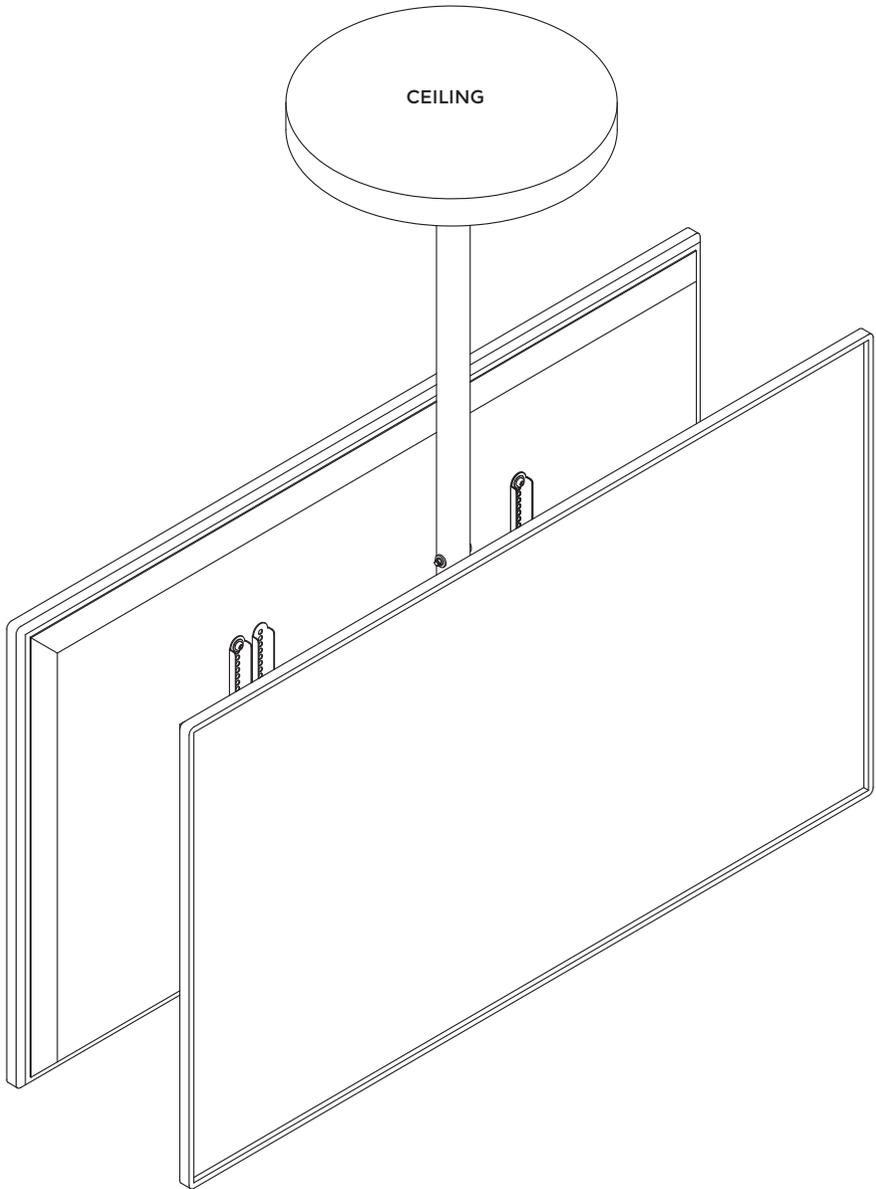

Final view after installing the mounted Projector on the Ceiling